


RANGE ROVER

MISUTONIDA
italian style accessories **4x4**

MISUTONIDA s.r.l. - 12062 CHERASCO (CN) - Via Fondovalle n° 3
Tel. 0172-489283 - Fax 0172-488381
Web Site: <http://www.misutonida.com> - E-mail: misutonida@misutonida.com

BULLONERIA ED ACCESSORI BOLT AND ACCESSORIES		
4	TE 10x50 NERI- BLACK BOLT	A
4	M10 AUTOB. - BLACK NUT	B
2	TE 8 x 30 CON TONDINO SALDATO - BOLT	C
2	ROND. Ø10	D
3	GROWER Ø6	E
3	ROND. Ø6	F
4	ROND. Ø8	G
2	GROWER Ø8	H
4	M8	I
2	TE 6X20	L

CODICE KIT
KIT CODE **161**

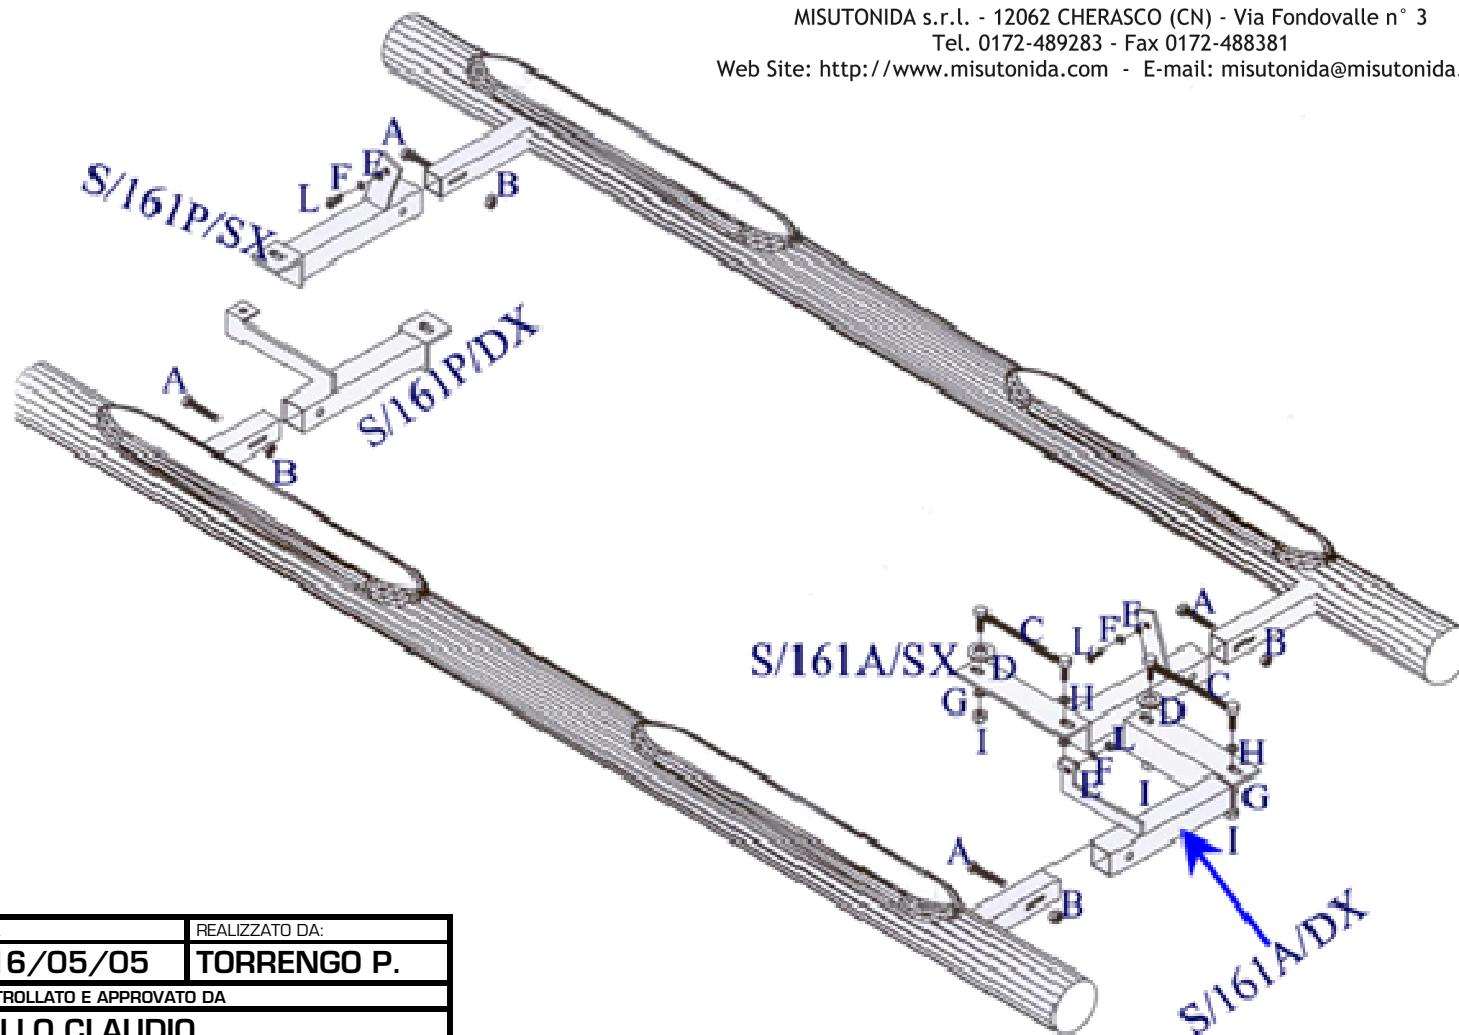

MISUTONIDA
italian style accessories **4x4**

DATA	REALIZZATO DA:
16/05/05	TORRENGO P.
CONTROLLATO E APPROVATO DA	
GALLO CLAUDIO	

OGGETTO: GRAN PEDANA
OBJECT: RANGE ROVER

ARTICOLO: GP/161/IX
ITEM: Versione acciaio INOX AISI 304
Stainless steel AISI 304 version

S/161A/DX SUPPORTO ANTERIORE DESTRO (FRONT STAND RIGHT)
S/161A/SX SUPPORTO ANTERIORE SINISTRO (FRONT STAND LEFT)
S/161P/DX SUPPORTO POSTERIORE DESTRO (REAR STAND RIGHT)
S/161P/SX SUPPORTO POSTERIORE SINISTRO (REAR STAND LEFT)

RANGE ROVER

ISTRUZIONI DI MONTAGGIO

PARTE ANTERIORE

1. Inserire il TE 8X30 con tondino saldato nei fori già esistenti sul telaio (**Figura 1**)
2. Posizionare le staffe libere S/161A/DX e S/161A/SX nei TE 8X30 con tondino saldato interponendo tra le staffe libere e il telaio le rondelle diametro 30 (**Vedi foto 2**).
3. Fissare le staffe utilizzando la bulloneria in dotazione, per i fori filettati già esistenti sul telaio TE 6X20 con relative rondelle (**Figura3 e 4**)

PARTE POSTERIORE

4. Allentare i bulloni già esistenti (foto 5).
5. Posizionare le staffe S/161P/DX e S/161P/SX sugli attacchi originali utilizzando per la parte lato passeggero la bulloneria originale (foto 6) dalla parte del lato guida il bullone originale e il TE 6X20 con rondelle in dotazione (foto 6)



FITTING INSTRUCTIONS SIDESTEP AND GRAND PEDANA

FRONT SIDE

- 1) Insert the TE 8x30 with welded rod in the holes already existing on the chassis (picture 1)
- 2) Position the free brackets S161ADX and S161ASX with the TE8x30 bolts with welded rod by interposing between the free brackets and the chassis the Ø 30 washers (picture 2)
- 3) Fix the brackets by using the supplied set of bolts and the TE 6x20 bolts with correspondent washers for the threaded holes already present on the chassis.

REAR SIDE

- 1) Loosen the bolts already existing on the chassis (picture 5)
- 2) Position the S161PDX and S161PSX brackets on the original fitting points by using for the passenger side the supplied set of bolts (picture 6) and for the driver's side the original bolt and the supplied TE 6x20 bolt with washer (picture 7).



RANGE ROVER

MISUTONIDA
italian style accessories **4x4**



MISUTONIDA
italian style accessories **4x4**

DATA	REALIZZATO DA:
16/05/05	TORRENGO P.
CONTROLLATO E APPROVATO DA	
GALLO CLAUDIO	

OGGETTO:	GRAN PEDANA
OBJECT:	RANGE ROVER
ARTICOLO:	Versione acciaio INOX AISI 304
ITEM:	GP/161/IX Stainless steel AISI 304 version