

MISUTONIDA

italian style 4x4
accessories

TOYOTA RAV 4 2010



Item Code

Codice Articolo

Référence Article

GP/270/IX
DSP/270/IX
GPO/270/IX

GB

STAINLESS STEEL GRAND PEDANA/LATERALE
DESIGN OVAL GRAND PEDANA

ITA


















GRAND PEDANA/LATERALE DESIGN/GRAND
PEDANA OVALE IN ACCIAIO INOX


FR

GRAND PEDANA/LATERALE DESIGN/GRAND
PEDANA OVAL EN ACCIER INOX

TOYOTA RAV 4 2010

Part List
 Lista della bulloneria
 Liste des pièces

A 	P/175/A x 4	L 	Ø 12 x 4
B 	P/175/B x 2	M 	Ø 10 x 8
C 	P/175/C x 2	N 	Ø 10 x 8
D 	TE 10X50 x 4	O 	TE 10X40 x 4
E 	M10 autoblocking autobloccante autobloquant x 4	P 	S/175P-DX x 1
F 	M12 x 4	Q 	S/175P-SX x 1
G 	Ø 12 x 4	R 	S/175A-DX x 1
H 	Ø 12 x 4	S 	S/175A-SX x 1
I 	Ø 10 x 4		

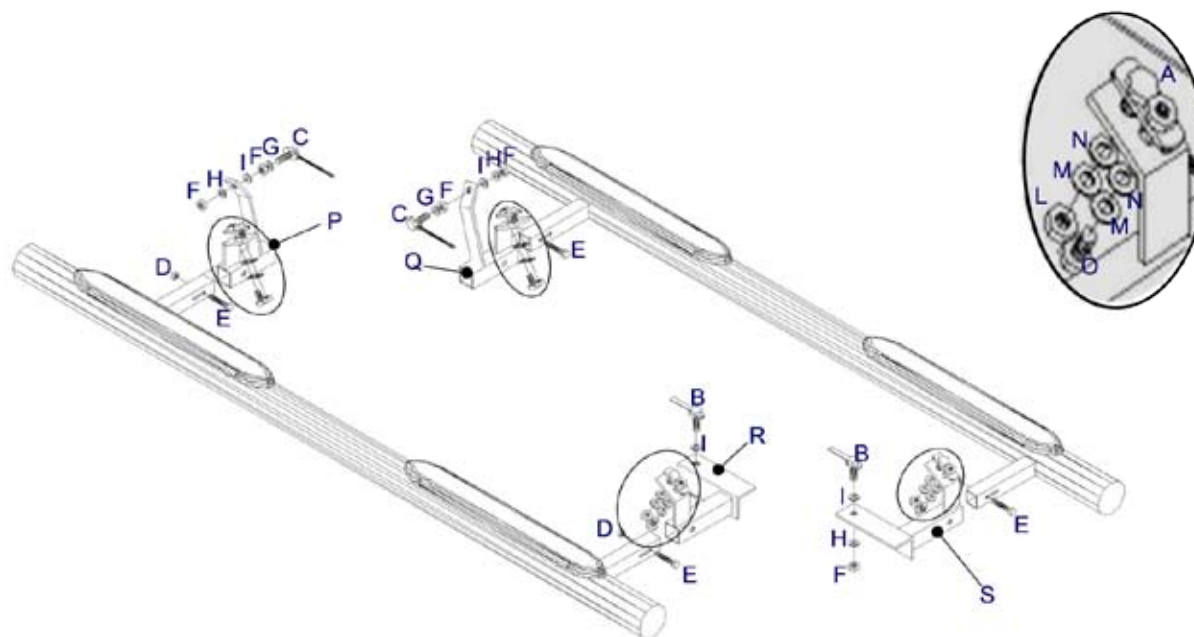

MISUTONIDA
 italian style accessories **4x4**

GB**FITTING
INSTRUCTIONS**

1. Remove the plastic caps (pictures 1,2 and 3).

FRONT SIDE

2. Insert A and B in the holes on the bodywork (pictures 4,5 and 6).
3. Position R and S and fix them to the bodywork using the supplied set of bolts.

REAR SIDE

4. Insert C in the the holes already present on the bodywork(pictures 7 and 8).
5. Fix C usinf G,F and G (pictures 9 and 10).
6. Position P and Q and fix them to the bodywork using the supplied set of bolts.
7. Position the grand pedana and tighten all the set of bolts.

ITA**ISTRUZIONI DI
MONTAGGIO**

1. Rimuovere i tappi in gomma (foto 1,2 e 3).

PARTE ANTERIORE

2. Inserire A e B nei fori già presenti sul telaio (foto 4,5 e 6).
3. Posizionare R ed S e fissarli al telaio utilizzando la bulloneria in dotazione.

PARTE POSTERIORE

4. Inserire C nei fori già presenti sul telaio (foto 7 e 8).
5. Fissare C usando G,F e G (foto 9 e 10).
6. Posizionare P e Q e fissarli al telaio usando la bulloneria in dotazione.
7. Posizionare la grand pedana e serrare tutta la bulloneria.

FR**INSTRUCTIONS DE
MONTAGE**


1. Enlever les bouchons en plastique (photos 1, 2 et 3).

PARTIE ANTERIEURE

2. Insérer A et B dans les trous déjà présents sûr le châssis (photos 4,5 et 6).
3. Positionner R et S et les fixer au châssis en utilisant la boulonnerie fournie.

PARTIE POSTERIEURE

4. Insérer C dans les trous déjà présents sûr le châssis (photos 7 et 8).
5. Fixer C en utilisant G,F et G (photo 9 et 10).
6. Positionner P et Q et les fixer au châssis en utilisant la boulonnerie fournie.
7. Positionner le grand pedana et serrer toute la boulonnerie.


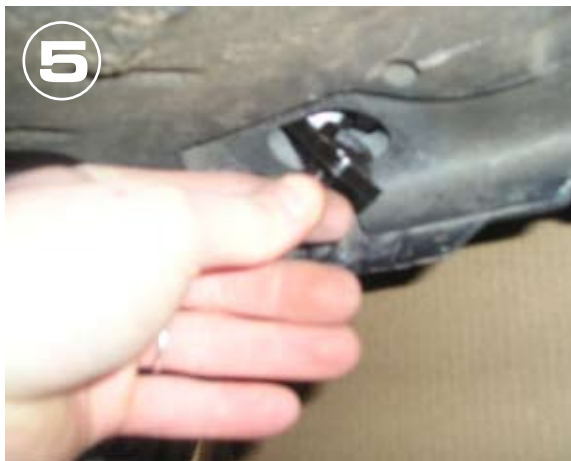


Date Data Date	Item Code Cod.Articolo Réf. Article	Vehicle model Modello Veicolo Modèle de Voiture
08/06/10	GP/270/IX GPO/270/IX DSP/270/IX	TOYOTA RAV 4 2010

Checked and approved by
Controllato ed approvato da

**Claudio
Gallo**

MISUTONIDA
italian style accessories **4x4**

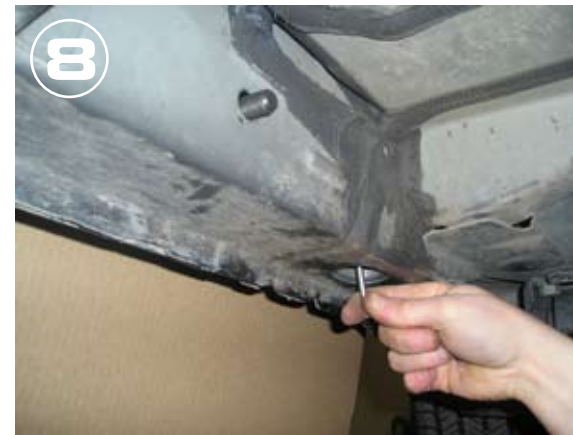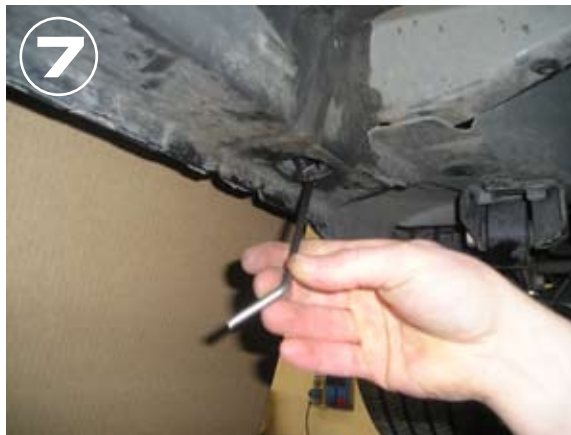

Date Data Date	Item Code Cod.Articolo Réf. Article	Vehicle model Modello Veicolo Modèle de Voiture
08/06/10	GP/270/IX GPO/270/IX DSP/270/IX	TOYOTA RAV 4 2010

Checked and approved by
Controllato ed approvato da

**Claudio
Gallo**

MISUTONIDA
italian style accessories **4x4**